

## Hearing Impaired Assistance

The Stethoset device is used for hearing assistance by individuals who **do not** have hearing aid devices.



### Operation

- To enable use, the Stethoset must be fitted with a charged battery.
- The Stethoset Receiver automatically turns on when the ear bows are pulled apart.
- When the receiver is taken off, it will automatically switch off after 30 seconds.
- The dial on the front of the receiver is used to adjust the volume.


### Tips during use:

- Wear the stethoset receiver the correct way around with the Sennheiser logo at the front.
- Ensure there is a free line of sight – do not obstruct the path of light between the radiator/transmitter and the stethoset receiver.
- The headphones possess excellent sound quality therefore it is not necessary to turn the volume to an excessively high level.
- If noise interference and sound distortion are being experienced it may be a sign that the battery needs recharging.

The induction neck loop device is utilised by individuals who **do** have hearing aid devices.



1. Put the induction loop around neck and insert its plug into the socket at the top of the receiver.
2. Set the hearing aid to position 'T'.
3. Wear the receiver around the neck with the Sennheiser logo facing away from the body.
4. Press the on/off button (3) until the channel indicator (1) lights up.
5. Use the dial on the front of the receiver to adjust the volume as required.
6. Turn the receiver off by pressing the on/off button (3) until the channel indicator light (1) goes off.

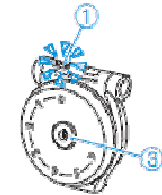

## Recharging

The Stethoset and induction loop systems both use the same transmitter device for recharging.

After use, place the receiver (stethoset or induction loop) into the transmitter station for recharging. Indicator light (11) should light up when the receiver is placed correctly into the transmitter. This indicator light will illuminate red when charging and green when the receiver is fully charged.

With a fully charged battery, the operating time of the receiver is up to 12 hours.

An additional battery can be charged via a slot on the right side of the transmitter.

